



PLAN

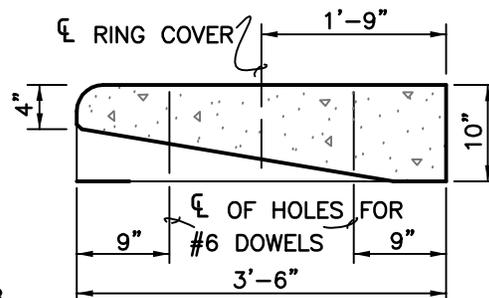

INLET TOP CROSS SECTION

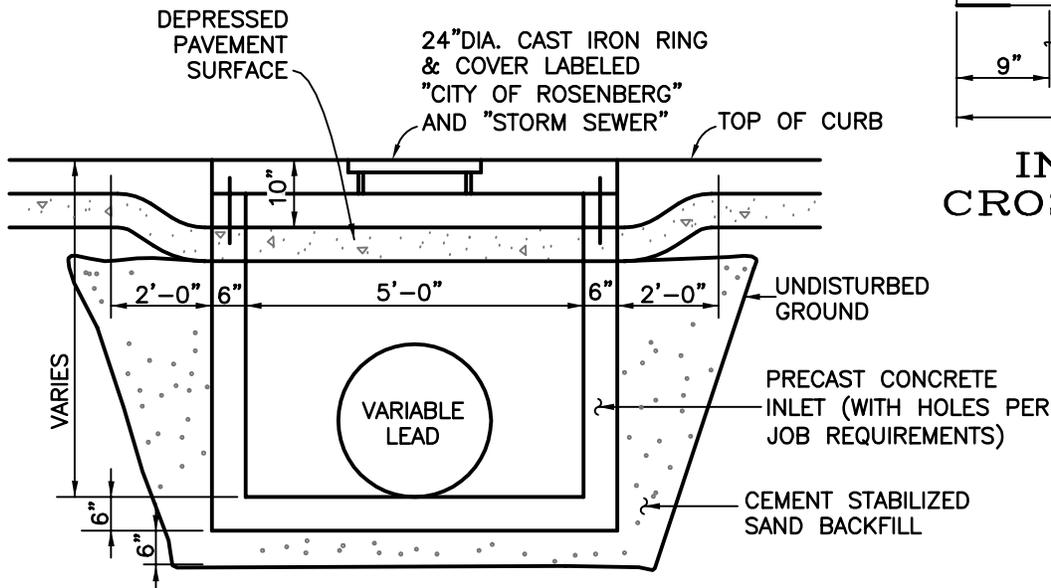

ELEVATION

NOTES:

1. INLET WALLS MAY BE EXTENDED USING PRECAST RISER SECTION.
2. INLET TOPS MUST BE SECURED TO THE INLET WALL USING # 6 DOWELS DRILLED AND GROUTED A MINIMUM DEPTH OF 5" INTO THE INLET WALL.
3. INLET BACKFILL SHALL BE CEMENT STABILIZED SAND TO THE TOP OF FIRST STAGE.
4. ALL STORM SEWER INLETS MUST HAVE A NO DUMPING STORM DRAIN MARKER [SEE DETAIL (D-109)] PLACED ON IT WHEN INSTALLED.



THE CITY OF ROSENBERG, FORT BEND COUNTY, TEXAS  
DEPARTMENT OF PUBLIC WORKS

TYPE H-2 INLET

DESIGN: CAK	CAD: STAFF	SCALE: NTS	DATE: 11/10	DRAWING: D-106
----------------	---------------	---------------	----------------	-------------------